


## Antishock valve curve

## Curva valvola antiurto

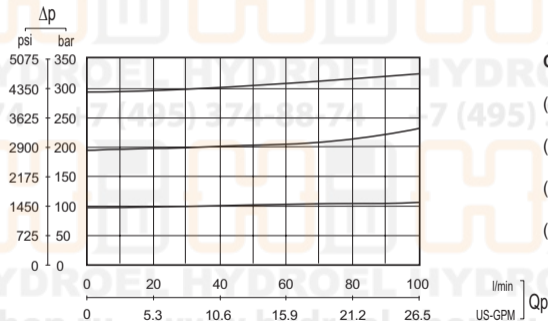

### Campi di taratura - Setting ranges

- (A) = 30/100 (passaggio - *at full flow*)  
20-A / 70-A (apertura - *at min. flow*)
- (B) = 111/180 (passaggio - *at full flow*)  
71-A / 150-A (apertura - *at min. flow*)
- (C) = 181/290 (passaggio - *at full flow*)  
151-A / 270-A (apertura - *at min. flow*)
- (D) = 291/350 (passaggio - *at full flow*)  
271-A / 350-A (apertura - *at min. flow*)